





ASSEMBLY INSTRUCTION

ИНСТРУКЦИЯ

A5144LT-1BR
A5144LT-1SI

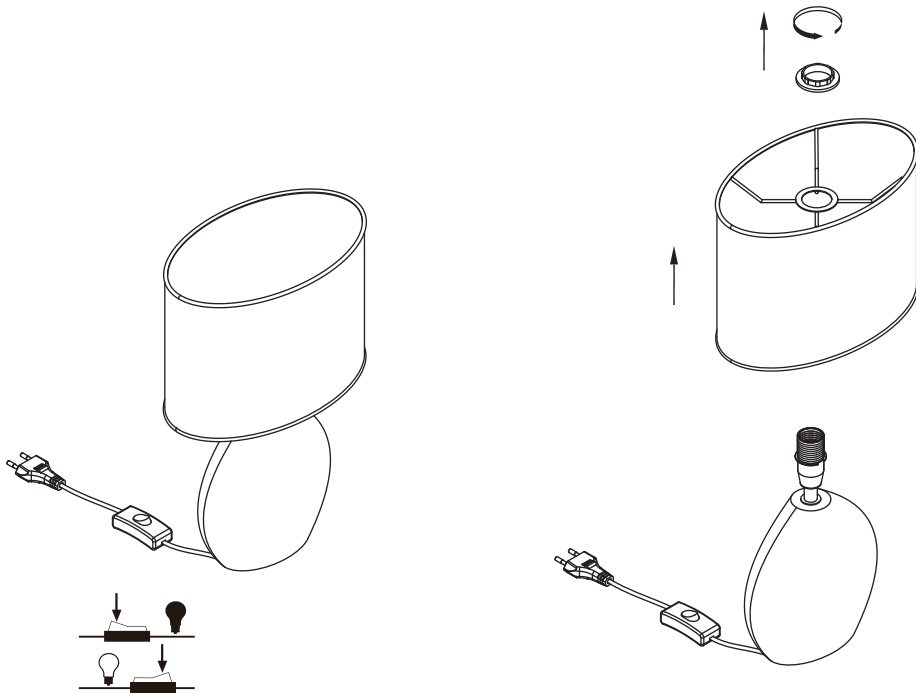

1

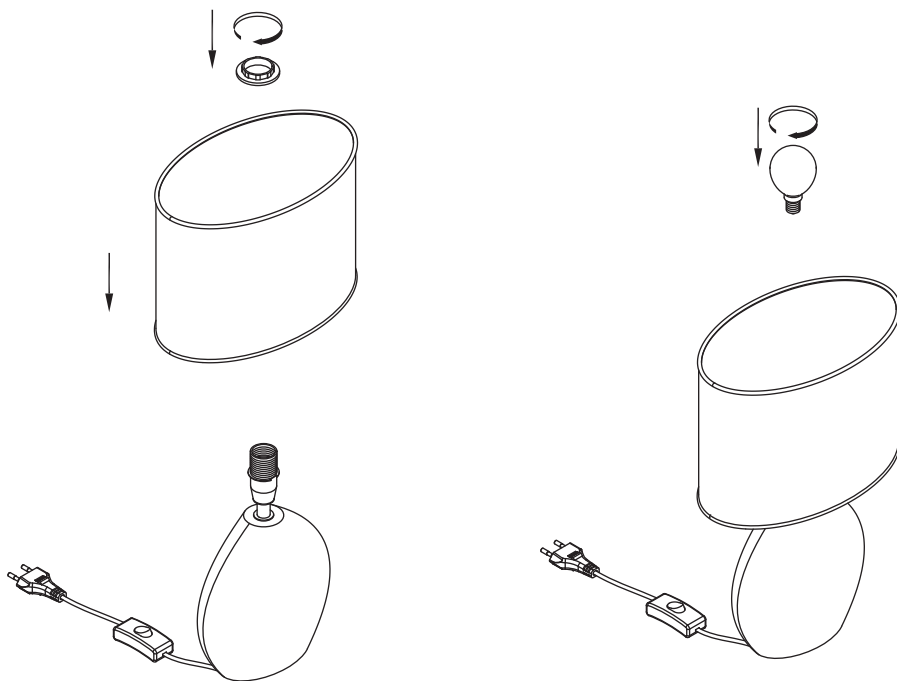

2

3